


a) Wake Attachment

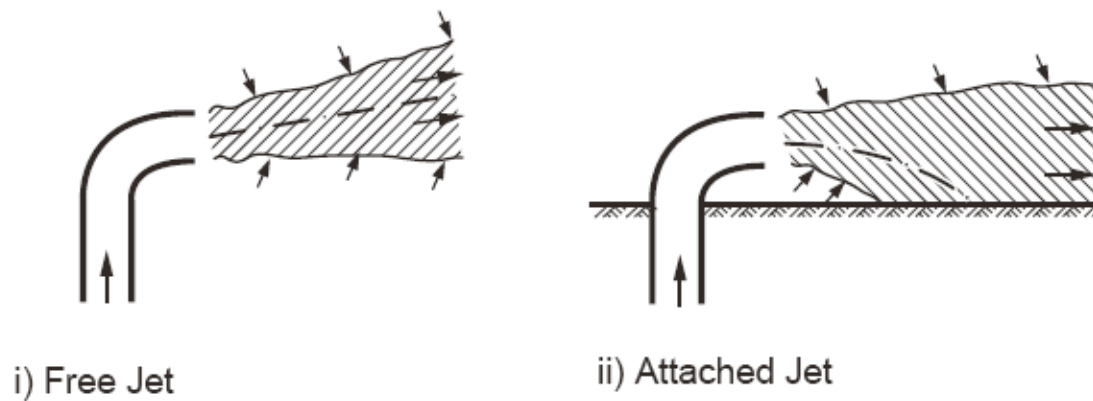

b) Coanda Attachment

Figure 2.5 *Examples of wake (crossflow induced) attachment and Coanda attachment conditions for jets discharging near bottom boundaries.*